

USER GUIDE AND INSTALLATION MANUAL
SWITCH DISPLAY



POPSW



Board No	Part No	Board No	Part No	Board No	Part No	Board No	Part No
1	SW31R	16	SW15Y*	31	SW26B	46	SW25B
2	SW16B	17	SW27G	32	SW26R	47	SW25R
3	SW16R	18	SW27Y	33	SW26Y	48	SW25Y
4	SW16Y	19	SW27R	34	SW33G	49	SW25G
5	SW16G	20	SW27B	35	SW33Y	50	SW29R*
6	SW19B	21	SW17B	36	SW33R		
7	SW19R*	22	SW17R	37	SW30G		
8	SW19Y*	23	SW34G	38	SW30Y		
9	SW19G*	24	SW34Y	39	SW30R		
10	SW32G	25	SW34R	40	SW30B		
11	SW18B	26	SW29G*	41	SW20		
12	SW18R*	27	SW29Y*	42	SW24B		
13	SW18Y*	28	SW28G	43	SW24R		
14	SW18G*	29	SW28Y	44	SW24Y		
15	SW15R*	30	SW28O	45	SW24G		

NOTE: These switches require a 1k-Ohm resistor placed on the 12V acc side of switch.